



- Kello voi poiketa joiltakin osin kuvastusta kellosta.

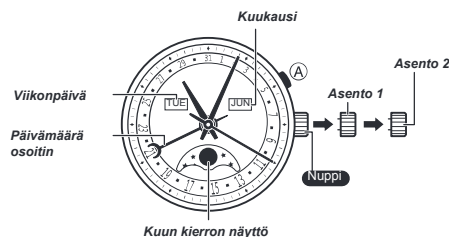


Nupin toiminnot

Joissakin vesitiiviissä malleissa (100 metriä, 200 metriä) on kierrelukittu nuppi. Kun sinun pitää käyttää nuppia, pyöritä sitä itseäsi kohti avataksesi sen. Vedä sitten nuppi ulos. Vältä käyttämästä liiallista voimaa kun vedät nuppia. Kello ei ole enää vesitiivis kun nuppi on auki. Kierä nuppi huolellisesti takaisin kiinni, kun olet suorittanut tarvittavat muutokset.

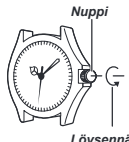

Jos kellossasi on pyörivä kehä...

Voit pyörittää kehän -merkin samaan kohtaan minuutti-osoittimen kanssa. Pystyt sitten kertomaan, että kuinka paljon on kulunut aikaa siitä kun kohdistit ▼ -merkin.

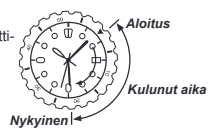

Kuukauden asettaminen

1. Use A to change the month setting.

Note

- Do not change the month setting while the current date is one from the 26th to the

31st. If you do, the watch will not change to the next month correctly when the 1st day of the month is reached.

- If you need to change the month setting while the current date is one from the 26th to the 31st, perform the steps below.
- If you need to change the month setting while the current date is one from the 26th to the 31st, using the procedure under "Setting the Day", change the day setting so it is any day between the 1st and the 25th (anything outside the range of the 26th to the 31st).

2. Change the month to the setting you want.
3. Change the day back to its correct setting.

Päivyrin asettaminen

1. Vedä Nuppi ulos asentoon 1.
2. Pyöritä Nuppia itseäsi kohti vaihtaaksesi päivämäärän.
3. Paina Nuppi takaisin kiinni.

HUOM!

- Älä vaihda päiväyriä klo 21:00 ja 0:30 välisenä aikana. Jos vaihdat, niin kello ei vaihda päiväyriä oikein seuraavana yönä.



Ominaisuudet

Tarkkuus : keskiarvo ±20 sekuntia kuukaudessa

Paristo : Yksi silver oxide paristo (Malli SR621SW)

Pariston käyttöikä noin 3 vuotta

Ajan ja muiden asetusten asettaminen samanaikaisesti

Suorita osoitin ja näyttö asetukset seuraavassa järjestyksessä

0 1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8 9 10 11 12

Viikonpäivän ja ajan asettaminen

1. Kun sekuntiosoitin on kellon 12 kohdalla, vedä Nuppi ulos asentoon 2.
2. Pyöritä Nuppia itseäsi poispäin siirtäaksesi ja -minuutti-osoittimia myötöpäivään. Ensiksi, aseta viikonpäivä. Kun olet asettanut viikonpäivän, aseta lonaika.
3. Paina Nuppi takaisin sisään.



Huom

0 1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8 9 10 11 12

Kuunkierron asettaminen



The Moon goes through a regular cycle of approximately 29.5 days during which it appears to wax and wane due to how it is illuminated by the Sun, and the relative positioning of the Earth, Moon, and Sun.

The greater the angular distance between the Moon and the Sun,* the more of the Moon we see illuminated.

* The angle to the Moon in relation to the direction at which the Sun is visible from the Earth.

Moon Phase Indicator

The Moon phase indicator of this watch indicates the current phase of the Moon as shown below.

Kuun vaiheen osoitin				
Kuun ikä	0	7	15	22
Kuun vaihe	Uusi kuu	Ensimmäinen neljännes - kasvaa	Täysikuu	Viimeinen neljännes - pienenee

- The Moon phase indicator shows the Moon as viewed at noon from a position in the Northern Hemisphere looking south. Note that at times the image shown by the Moon phase indicator may differ from that of the actual Moon in your area.
- The left-right orientation of the Moon phase is reversed when viewing from the Southern Hemisphere or from a point near the equator.

Setting the Moon Age

1. Pull the Crown out to click 1.
2. Rotate the Crown away from you until there is nothing visible in the Moon phase indicator (Moon age of 0).
3. Slowly rotate the Crown away from you again until the Moon phase indicator shows the correct Moon phase.
 - For details about Moon phases, see "Moon Phase Indicator" above.
4. Push the Crown back in.

